


KÄRCHER

IB 10/8 L2P

English


1

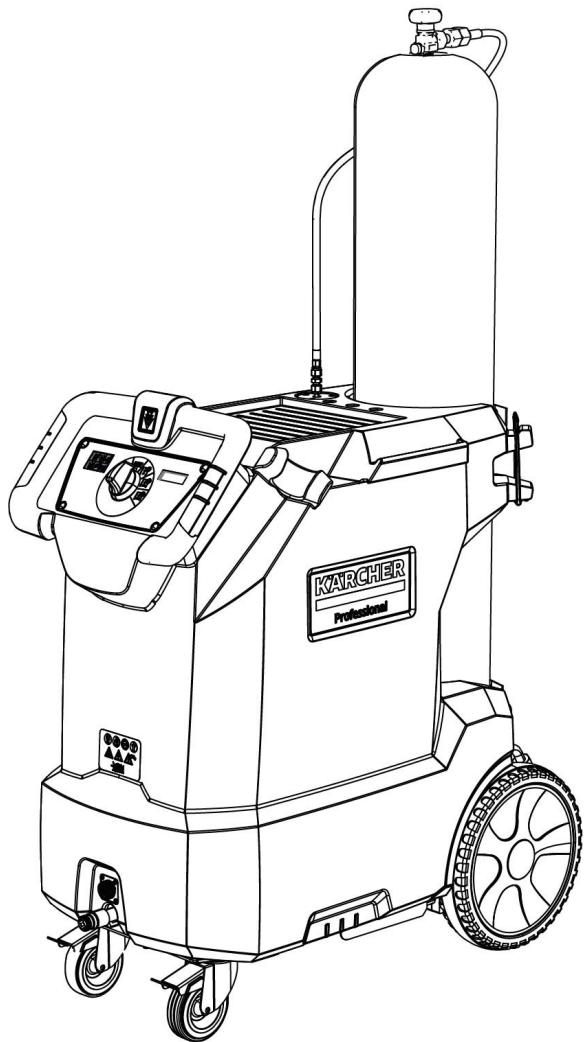


**Register
your product**
www.kaercher.com/welcome




EAC

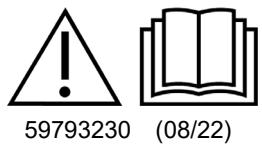

59793230 (08/22)

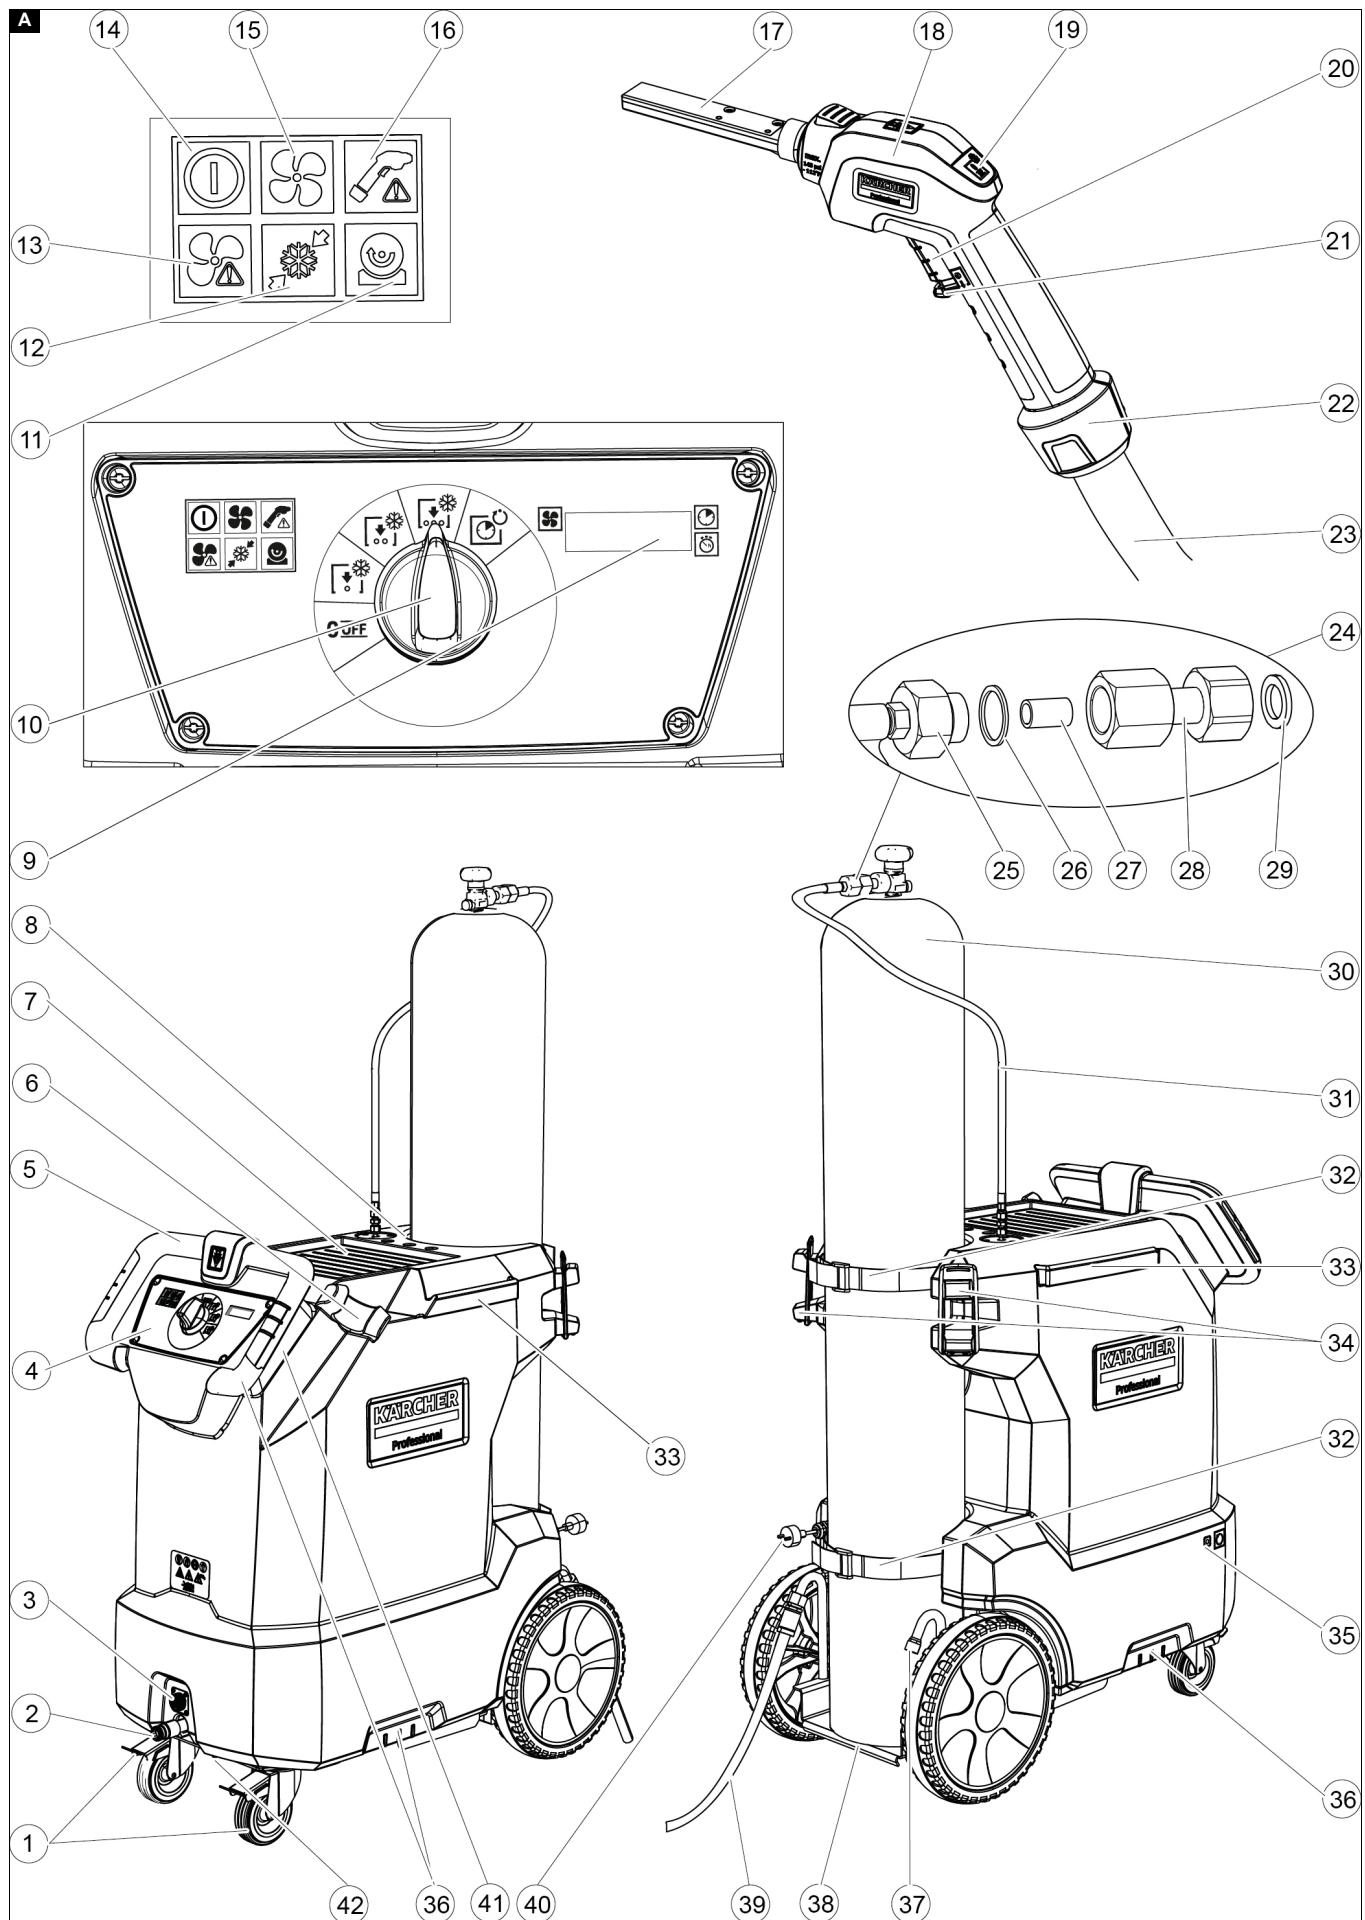

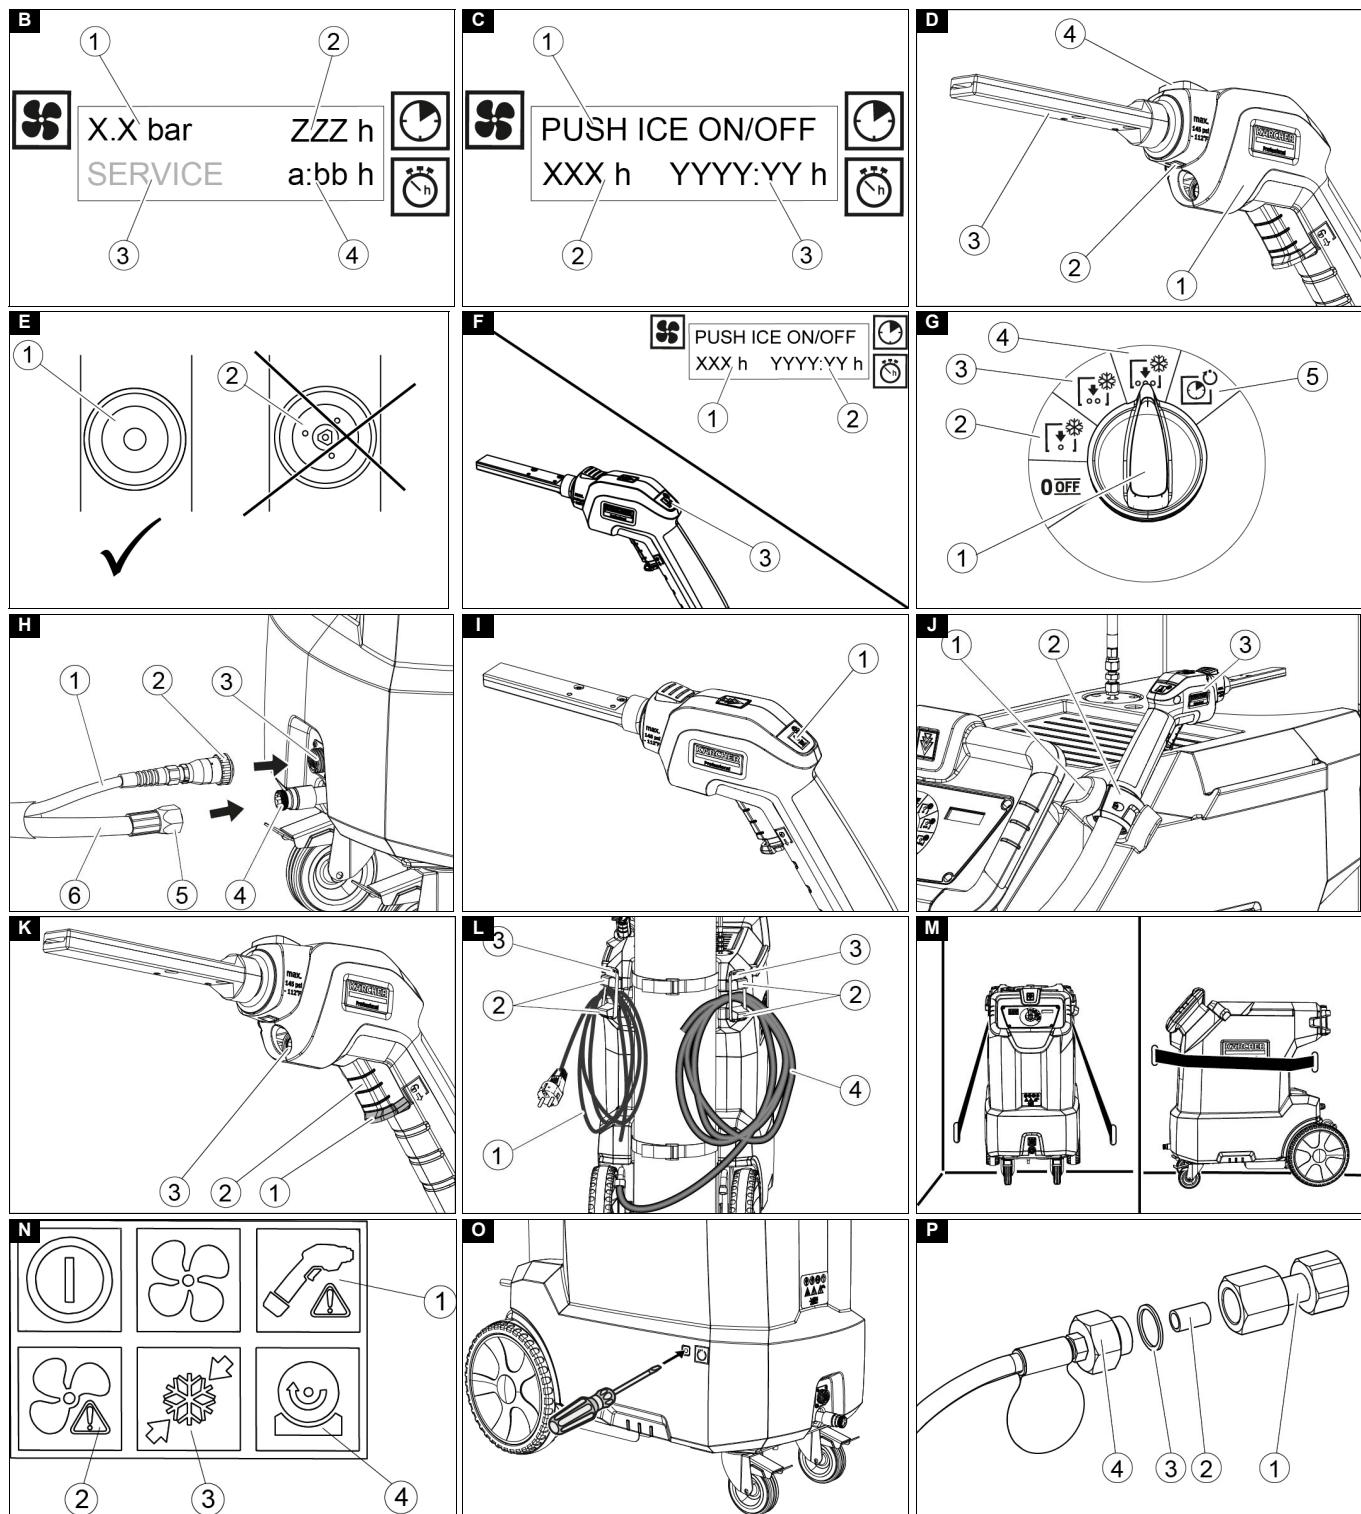

- The device may not be operated in a potentially explosive atmosphere.
- The minimum air exchange specified in the "Technical data" section must be observed at the operating location.
- The casing of the device may only be removed by KÄRCHER Customer Service for maintenance purposes.

CO₂ quality

To ensure trouble-free operation, the carbon dioxide used must at least comply with the following specifications:

- Carbon dioxide technical, class 2.5 or better
- Purity ≥ 99.5%
- Water content (H₂O) ≤ 250 ppm
- NVOC (oil and fat) ≤ 2 ppm

Function

Carbon dioxide snow is created via decompression of liquid carbon dioxide. The gaseous carbon dioxide that also arises is carried away from the workplace via the exhaust hose.

The carbon dioxide snow is pressed into dry ice pellets in the device.

Compressed air reaches the jet gun via a solenoid valve. The air pressure is controlled by an on-site pressure reducer.

When the trigger of the jet gun is activated, the valve opens and the air jet emerges from the jet gun. Dry ice pellets are additionally dosed into the air jet via a dosing device.

Contents

| | |
|-----------------------------------|----|
| General notes | 11 |
| Intended use | 11 |
| Function | 11 |
| Environmental protection | 11 |
| Safety instructions | 11 |
| Safety devices | 13 |
| Accessories and spare parts | 13 |
| Scope of delivery | 13 |
| Control elements | 13 |
| Initial startup | 13 |
| Operation | 14 |
| Ending operation | 15 |
| Transport | 16 |
| Storage | 16 |
| Care and service | 16 |
| Troubleshooting guide | 16 |
| Warranty | 17 |
| Accessories | 17 |
| Technical data | 17 |
| Declaration of Conformity | 18 |

General notes

  Read the original instructions before using the device for the first time and act in accordance with it. Keep the original instructions for future reference or for future owners.

Environmental protection

 The packing materials can be recycled. Please dispose of packaging in accordance with the environmental regulations.

 Electrical and electronic appliances contain valuable, recyclable materials and often components such as batteries, rechargeable batteries or oil, which - if handled or disposed of incorrectly - can pose a potential threat to human health and the environment. However, these components are required for the correct operation of the appliance. Appliances marked by this symbol are not allowed to be disposed of together with the household rubbish.

Notes on the content materials (REACH)
Current information on content materials can be found at: www.kaercher.com/REACH

Safety instructions

The device may only be operated by persons who have read and understood these

operating instructions. In particular, all safety instructions must be observed. Store these operating instructions so that they are available to the operator at all times.

The operator of the unit must carry out a risk assessment on site and ensure that operators are instructed.

Hazard levels

⚠ DANGER

- Indication of an imminent threat of danger that will lead to severe injuries or even death.

⚠ WARNING

- Indication of a potentially dangerous situation that may lead to severe injuries or even death.

⚠ CAUTION

- Indication of a potentially dangerous situation that may lead to minor injuries.

ATTENTION

- Indication of a potentially dangerous situation that may lead to damage to property.

Symbols on the unit



Danger from flying dry ice pellets.

Do not point the jet gun at people. Remove third parties from the operating location and keep them away (e.g. via barriers) during operation. Do not touch the nozzle or the dry ice jet during operation.

⚠ Risk of suffocation from carbon dioxide.

During operation, the carbon dioxide content of the air at the workplace increases.

Make sure there is sufficient air exchange at the workplace.

Lay the exhaust hose outdoors, for example, so that nobody is endangered by carbon dioxide.

Note: Carbon dioxide is heavier than air. Make sure that carbon dioxide does sink to lower-lying areas, for example by flowing from the outside into a basement below the workshop (flows).

For longer jet work (longer than 10 minutes per day) and especially in small rooms (less than 300 m³), we recommend wearing a carbon dioxide warning device.

Signs of high levels of carbon dioxide: 3...5%: Headache, high breathing rate.

7...10%: Headache, nausea, possibly unconsciousness.

If these symptoms occur, switch off the device immediately and get some fresh air.

Before continuing work, improve ventilation or use a breathing apparatus.

Carbon dioxide is heavier than air and collects in confined spaces, lower-lying spaces or in closed containers. Ensure adequate ventilation at the workplace.

Observe the safety data sheet from the carbon dioxide supplier.



Risk of injury, risk of damage from electrostatic charging.

The cleaning object can become electrostatically charged during the cleaning process.

Ground the object to be cleaned and keep it grounded until the cleaning process is complete.

Risk of injury from electric shock.

Do not open the device. Work on the device may only be performed by KÄRCHER Customer Service.

⚠ Risk of injury from cold burns.

Dry ice has a temperature of -79 °C. Do not touch the dry ice or cold parts of the unit.

⚠ Risk of injury from carbon dioxide bottle falling over, Danger of suffocation due to carbon dioxide

Attach the carbon dioxide bottle securely.



Risk of injury from flying dry ice pellets and dirt particles.

Wear safety goggles.

Danger of hearing damage.

Wear hearing protection.



Risk of injury from flying dry ice pellets and dirt particles.

Wear protective gloves according to EN 511.



Risk of injury from flying dry ice pellets and dirt particles.

Wear long-sleeved protective clothing.



Caution! Permanent malfunctions possible.

Traces of fat or oil interfere with the formation of dry ice snow in the device.

Do not use grease, oil or other lubricants on the connection nozzle or on the thread of the carbon dioxide bottle or the carbon dioxide hose.

General safety instructions

⚠ DANGER

Risk of injury

The device may start up unexpectedly. Unplug the mains plug from the power socket before working on the device.

Risk of injury

Dry ice and cold device parts can cause cold burns on contact with the skin.

Wear cold protection clothing or allow the device to warm up before working on the device.

Never put dry ice in your mouth.

Risk of injury

The dry ice jet can be dangerous if used improperly.

Do not direct the dry ice jet at persons, live electrical equipment or at the device itself.

Do not aim the dry ice jet at yourself or others, e.g. to clean clothes or shoes.

Risk of injury

Light objects can be blasted away by the dry ice jet.

Fix light objects in place before starting cleaning.

Risk of asphyxiation

Increased concentration of carbon dioxide in the air you breathe can lead to death from suffocation.

Make sure that no exhaust gases are emitted close to air vents.

Provide adequate ventilation in the workplace and ensure that the exhaust gases are properly discharged.

⚠ WARNING

Risk of injury

The recoil force of the jet gun can throw you off balance.

Find a safe place to stand and hold the jet gun firmly before you pull the trigger.

Risk of injury

Dry ice pellets and dirt particles can hit and injure people.

Do not use the device when other people are within range unless they are wearing protective clothing.

Do not use the device if a power cable or important parts of the device are damaged, e.g. safety devices, abrasive hose, jet gun.

Safety instructions for gas bottles

⚠ DANGER

Risk of bursting, risk of suffocation

Gas bottles can burst if they become too hot or if they are mechanically damaged.

Leaking carbon dioxide can cause death by suffocation.

Protect gas bottles from excessive heat, fire, dangerous corrosion, mechanical damage and unauthorized access.

Store gas bottles so that no escape routes are restricted.

Do not store gas bottles in underground rooms, on and at stairs, in hallways, corridors and garages.

Do not store gas bottles together with flammable materials.

Store gas bottles upright.

Secure gas bottles against tipping over or falling.

Close the bottle valve before transporting gas bottles.

Transport gas bottles with a gas bottle cart or a vehicle and secure the bottles against falling.

Pull on the protective cover before lifting the gas bottle to check that the protective cover is securely in place.

Secure the gas bottle at the point of use against falling over.

Do not open the bottle valve to check the pressure.

Open and close the bottle valve only by hand without the aid of tools.

Check the bottle valve/device connection for leaks.

Close the bottle valve during work breaks and at the end of work to prevent uncontrolled gas escaping.

Only empty gas bottles so far that a small residual pressure remains in the bottle in order to prevent foreign matter from entering.

When the gas bottle has been emptied to the residual pressure, first close the bottle

valve before unscrewing the extraction device. The gas bottle still has considerable residual pressure.

Before returning it, screw the locking nut and the protective cover onto the gas bottle.

If the gas escapes uncontrolled, close the bottle valve. If the gas emission cannot be stopped, take the bottle outside or leave the room, lock the access and only enter and ventilate the room if a concentration measurement rules out a danger.

Regulations and guidelines

In the Federal Republic of Germany, the following regulations and guidelines apply to the operation of this system (available from Carl Heymanns Verlag KG, Luxemburger Straße 449, 50939 Cologne):

- DGUV R 100-500 Working with blasting machines
- DGUV 113-004 Working in confined spaces
- DGUV 113-004 Use of protective clothing
- DGUV 113-004 Use of protective gloves
- DGUV 113-004 Working with jet units
- DGUV 213-056 Gas warning unit
- VDMA 24389 Systems for dry ice jet - safety requirements

Switching off in the event of an emergency

1. Release the trigger of the jet gun.
2. Turn the program switch to "0/OFF".
3. Close the stop valve on the carbon dioxide bottle.
4. Shut off the compressed air supply.

Safety devices

CAUTION

Missing or modified safety devices

Safety devices are provided for your own protection.

Never modify or bypass safety devices.

Safety lever

The safety lever prevents unintentional activation of the jet gun.

The trigger can only be operated when the safety lever has been raised beforehand.

Accessories and spare parts

Only use original accessories and original spare parts. They ensure that the appliance will run fault-free and safely.

Information on accessories and spare parts can be found at www.kaercher.com.

Protective clothing

Full-view safety goggles, anti-fog, part no.: 6.321-208.0

Cold protection gloves with anti-slip profile, category III according to EN 511, part no.: 6.321-210.0

Hearing protection with headband, part no.: 6.321-207.0

Scope of delivery

Check the contents for completeness when unpacking. If any accessories are missing or in the event of any shipping damage, please notify your dealer.

Control elements

Illustration A

- ① Steering roller with parking brake
- ② Abrasive hose coupling
- ③ Control cable coupling
- ④ Control panel
- ⑤ Push handle
- ⑥ Holder for jet gun
- ⑦ Storage area
- ⑧ Nozzle holder
- ⑨ Display
- ⑩ Program switch
- ⑪ Fault indication pellet dosing
 - Lights up red: The drive motor of the dosing device is blocked
 - Flashes red: The drive motor of the dosing device is overheated
- ⑫ Fault indication pellet generation
 - Lights up red: The drive motor for pellet production is blocked
- ⑬ Compressed air supply fault indicator
 - Lights up red: Compressed air supply has too little pressure
 - Flashes red: The internal pressure is too high
- ⑭ Voltage supply indicator lamp
 - Lights up green: Voltage supply OK
- ⑮ Compressed air indicator light
 - Lights up green: Compressed air supply OK
- ⑯ Jet gun fault indicator
 - Lights up yellow: The trigger is fastened (e.g. cable tie)
 - Flashes yellow: no jet gun connected to the device
- ⑰ Jet nozzle
- ⑱ Jet gun
- ⑲ Compressed air / pellets button with indicator light
 - Lights up red: Compressed air jet
 - Off: Pellet jet
- ⑳ Trigger
- ㉑ Safety lever
- ㉒ Retaining cone
- ㉓ Abrasive hose
- ㉔ Bottle connection
- ㉕ Screw plug
- ㉖ Copper sealing ring
- ㉗ Carbon dioxide filter
- ㉘ Screw flange
- ㉙ Bottle connection seal (order number 6.574-316.0)
- ㉚ Carbon dioxide immersion pipe bottle (not included in the scope of delivery)
- ㉛ Carbon dioxide hose
- ㉜ Carbon dioxide bottle retaining belt
- ㉝ Homebase retaining rail
- ㉞ Hose/cable holder with rubber tensioner
- ㉟ Opening for resetting the motor circuit breaker
- ㉞ Handle
- ㉞ Compressed air connection
- ㉞ Storage space for carbon dioxide bottle
- ㉞ Carbon dioxide exhaust hose
- ㉞ Mains connection cable with mains plug
- ㉞ Holder for abrasive hose
- ㉞ Drain tap for condensation water

Display

Program switch at level 1 ... 3:

Illustration B

- ① Jet pressure
- ② Total operating time

③ Customer Service visit is due

④ Blasting jet time since last reset

Program switch in the reset position:

Illustration C

- ① To reset the jet time, press the compressed air / pellets button
- ② Period of time until the next Customer Service visit
- ③ Blasting jet time since last reset

Initial startup

⚠ DANGER

Risk of injury

Dry ice pellets can escape from damaged components and cause injuries.

Before initial startup, check all components of the device, especially the abrasive hose, to ensure that they are in good condition. Replace damaged assemblies with flawless ones. Clean soiled assemblies and check that they are working properly.

ATTENTION

Risk of damage

Condensation water can drip from the device casing onto the floor.

Do not operate the device on surfaces that are sensitive to moisture.

1. Open the drain tap and drain the condensation water that has collected in the device.
2. Close the drain tap.
3. Store the device on a level and flat surface.
4. Block the steering rollers with the parking brakes.
5. Connect the abrasive hose to the coupling on the device.

Illustration H

- ① Control cable
 - ② Union nut
 - ③ Control cable coupling
 - ④ Abrasive hose coupling
 - ⑤ Union nut
 - ⑥ Abrasive hose
6. Unscrew the union nut of the abrasive hose and slightly tighten it with an open-end wrench.
 7. Plug the control cable into the device.
 8. Screw on the union nut of the control cable and tighten by hand.
 9. Insert the jet gun with the retaining cone into the holder on the device.

⚠ DANGER

Risk of asphyxiation

Carbon dioxide escapes from the exhaust hose. From a concentration of 8 percent by volume in the breath, carbon dioxide leads to unconsciousness, respiratory arrest and death. The maximum workplace concentration is 0.5%. Carbon dioxide is heavier than air and collects in pits, basements and depressions.

Lay the exhaust hose so that nobody is endangered by the escaping carbon dioxide.

Note: Carbon dioxide is heavier than air. Make sure that carbon dioxide does sink to lower-lying areas, for example by flowing

from the outside into a basement below the workshop (flows).

10. Lay the exhaust hose outdoors or connect it to an extraction device.

Changing the jet nozzle

The jet nozzle on the jet gun can be exchanged in order to adapt the device to the material and degree of contamination of the object to be cleaned.

⚠ DANGER

Risk of injury

The unit can start unintentionally and cause injuries and cold burns from the jet of dry ice pellets.

Set the program switch to "0/OFF" before removing the nozzle.

⚠ WARNING

Risk of injury

Immediately after use, the nozzle is very cold and can cause cold burns if touched. Let the nozzle thaw before replacing it or wear protective gloves.

ATTENTION

Risk of damage

Do not operate the device if no jet nozzle is attached to the jet gun.

1. Press the unlocking button down and pull the jet nozzle out of the jet gun.

Illustration D

- ① Jet gun
- ② Pin
- ③ Jet nozzle
- ④ Unlocking button

2. Press the other jet nozzle into the jet gun until it clicks into place.

Note: The jet nozzle is correctly engaged when the pin no longer protrudes from the casing. The jet nozzle can be rotated to the desired orientation.

Connecting compressed air

Note

For trouble-free operation, the compressed air must have a low moisture content (maximum 5% relative humidity, dew point below 0°C). The compressed air must be free of oil, dirt and foreign bodies.

The compressed air must be dry and oil-free, at least one aftercooler and a separator must be connected downstream of the compressor.

The compressed air supply must be equipped with an on-site pressure reducer.

1. Don personal protective equipment.
2. Connect a compressed air hose to the compressed air connection on the device.
3. Slowly open the on-site compressed air stop valve.

Connecting the carbon dioxide bottle

Requirements for the CO₂ supply:

- CO₂ bottle with dip tube for withdrawing liquid CO₂.

Note

CO₂ bottles with a dip tube (also called a riser) are usually marked with a large "T" on the bottle or the back of the bottle.

In some cases, the dip tube is additionally symbolised by a vertical colour line on the bottle.

- The CO₂ quality must correspond to the specifications in the chapter "Intended use".

ATTENTION

Malfunctions

A residual pressure valve or check valve connected to the CO₂ bottle prevents extraction of the required CO₂ amount.

If a CO₂ bottle with residual pressure valve is used, the ABS residual pressure valve (order number 2.574-006.0), available as an accessory, must be installed between the bottle and the unit.

Illustration E

- ① CO₂ bottle without residual pressure valve

- ② CO₂ bottle with residual pressure valve

As the temperature rises, the effectiveness of pellet production decreases and a larger proportion of carbon dioxide is released in gaseous form via the exhaust hose. Store carbon dioxide bottles as cool as possible (below 31 °C) and protect them from heat, solar radiation and heat during operation.

1. Push the device onto a level, stable surface.
2. Apply the parking brakes on both steering rollers.
3. Open both straps for the carbon dioxide bottle.
4. Place the carbon dioxide bottle on the storage space on the device.
5. Place both straps around the carbon dioxide bottle, lock and tighten.
6. Unscrew the protective cover from the carbon dioxide bottle.

ATTENTION

Malfunctions possible

Traces of fat interfere with the formation of dry ice snow in the device.

Check the connection nozzle and thread of the carbon dioxide bottle and the carbon dioxide hose and, if necessary, clean them before connecting to the device.

Make sure that an undamaged seal is inserted between the bottle and the bottle connection.

7. For bottles with residual pressure valve, attach the ABS residual pressure valve (order number 2.574-006.0), available as an accessory, to the carbon dioxide bottle. Follow the separate instructions enclosed with the adapter.

8. Connect the bottle connection to the carbon dioxide filter on the carbon dioxide bottle.

Make sure that a sealing ring bottle connection in perfect condition is inserted between the screw flange and the carbon dioxide bottle.

9. Lightly tighten the narrow union nut of the screw flange with an open-end wrench or ring spanner (e.g. 6.574-337.0). Hold the wide union nut with an open-end wrench to prevent the carbon dioxide hose from twisting.

ATTENTION

Do not put torsion (twist) on the carbon dioxide hose, otherwise it may be damaged.

Establishing the voltage supply

⚠ DANGER

Risk of injury from electric shock

The power socket used must be installed by an electrician and comply with IEC 60364-1.

The device may only be connected to a voltage supply with protective earth.

The power socket used must be easily accessible and at a height of between 0.6 m and 1.9 m above the floor.

The power socket used must be within sight of the operator.

The device must be protected by an error current circuit breaker, 30 mA.

Check the mains connection of the device for damage before each use. Do not operate the device with a damaged power cable. Have a damaged cable replaced by a qualified electrician.

The extension cable must ensure IPX4 protection and the cable design must at least comply with H 07 RN-F 3G1.5.

Unsuitable extension cables can be dangerous. If an extension cable is used, it must be suitable for outdoor use and the connection must be dry and above the ground. It is recommended to use a cable drum that holds the socket at least 60 mm above the floor.

1. Plug the mains plug into the socket.

Reset jet time

To account for working hours, the jet time counter can be reset to 0 before work begins.

1. Turn the program switch to the "Reset" position.

Illustration F

- ① Period of time until the next Customer Service visit

- ② Blasting jet time since last reset

- ③ Compressed air/pellets button

2. Press the compressed air/pellets button on the jet gun.

The jet time is reset to 0

Operation

⚠ DANGER

Risk of injury

Dry ice pellets flying around can cause injuries or cold burns.

Do not point the jet gun at people. Remove third parties from the operating location and keep them away (e.g. via barriers) during operation. Do not touch the nozzle or the dry ice jet during operation.

1. Carry out all maintenance work from the chapter "Care and maintenance / daily before starting operation".

- Cordon off the work area to prevent people from entering during operation.

⚠ DANGER

Risk of asphyxiation

Risk of suffocation from carbon dioxide.
The dry ice pellets consist of solid carbon dioxide. The carbon dioxide content of the air at the workplace increases when the device is operated.

Lay the exhaust hose outdoors, for example, so that nobody is endangered by carbon dioxide.

Note: Carbon dioxide is heavier than air. Make sure that carbon dioxide does sink to lower-lying areas, for example by flowing from the outside into a basement below the workshop (flows).

For longer jet work (longer than 10 minutes per day) and especially in small rooms (less than 300 m³), we recommend wearing a carbon dioxide warning device.

Signs of high carbon dioxide concentration in the air you breathe:

3...5%: Headache, high breathing rate.

7...10%: Headache, nausea, possibly unconsciousness.

Turn off the device immediately and seek fresh air at the first signs of these symptoms. Before continuing work, be sure to improve the ventilation measures or use a breathing apparatus.

Observe the safety data sheet provided by the carbon dioxide supplier.

Danger from substances harmful to health.

Substances removed from the object to be cleaned are whirled up as dust.

Adhere to the appropriate safety measures if harmful dusts can arise during the cleaning process.

Risk of explosion

A mixture of iron oxide and light metal dust can ignite under unfavourable conditions and generate intense heat.

Never work on light metals and ferrous parts at the same time.

Clean the work area and the extraction device before you work on the respective other material.

- When working in confined spaces, ensure that there is sufficient air exchange to keep the carbon dioxide concentration in the room air below the dangerous level.
- Fasten light cleaning objects in position.

⚠ DANGER

Danger of electrostatic discharge

The cleaning object can become electrostatically charged during the cleaning process. The subsequent discharge can cause injuries and damage electronic assemblies. Ground the object to be cleaned and maintain it during the cleaning process.

- Electrically ground the object to be cleaned.
- Wear protective clothing, protective gloves, tightly fitting safety goggles and hearing protection.
- Activate the compressed air supply.

- Open the stop valve on the carbon dioxide bottle.
- Turn the program switch to level 3.

Illustration G

- ① Program switch
- ② Level 1
- ③ Level 2
- ④ Level 3
- ⑤ Reset

- Choose a safe place to stand and adopt a safe posture so as not to be unbalanced by the recoil force of the jet gun.

Cleaning with dry ice pellets

- Select operation with pellet jet using the compressed air / pellets button. (The indicator light must not light up.)

Illustration I

- ① Compressed air / pellets button with indicator light
Lights up red: Compressed air jet
Off: Pellet jet

- Set the jet pressure on the on-site pressure reducer to the desired value. Maximum pressure: 10 bar. Minimum pressure:

- Level 1: 0.7 bar
- Level 2: 1.4 bar
- Level 3: 2.8 bar

Note

The pressure is shown in the display. If the minimum pressure is not reached or the maximum pressure is exceeded, the display flashes.

- Point the jet gun away from your body.
- Push the safety lever of the jet gun upwards and at the same time activate the trigger.

Illustration K

- ① Safety lever
- ② Trigger
- ③ Working light

The working light switches on at the same time as the pellet production.

- Wait until the pellet jet has built up.

ATTENTION

Never operate the device without or with an empty carbon dioxide bottle.

Use the program switch to select a higher level or change the carbon dioxide bottle if no pellets come out of the jet gun after 5 minutes of jet.

- If necessary, turn the program switch back to level 2 or 1.

ATTENTION

Risk of damage

Coarse pellets may possibly escape.

Check the cleaning performance on a non-visible area first to avoid damage.

Note

If there are interruptions in the dry ice stream, increase the blasting pressure or set a lower level on the programme selector switch.

- Direct the pellet jet at the object to be cleaned and remove the dirt with the jet.

- Release the trigger.

The pellet jet stops.

The working light goes out after 30 seconds.

- Insert the jet gun with the retaining cone into the holder on the device.

Illustration J

- ① Holder
- ② Retaining cone
- ③ Jet gun

- Close the stop valve on the carbon dioxide bottle if the work break lasts longer than 30 minutes.

Compressed air without pellet jet

Loose dirt can be removed with compressed air without dry ice pellets.

- Select operation with compressed air using the compressed air/pellets button. (The indicator light must light up red.)

Illustration I

- ① Compressed air / pellets button with indicator light
Lights up red: Compressed air jet
Off: Pellet jet

- Push the safety lever of the jet gun upwards and at the same time activate the trigger.

Illustration K

- ① Safety lever
- ② Trigger
- ③ Working light

The compressed air flows out of the jet nozzle and the working light is switched on.

- Direct the compressed air jet at the object to be cleaned and remove the soiling.

- Release the trigger.
The compressed air jet stops.
The working light goes out after 30 seconds.

- Insert the jet gun with the retaining cone into the holder on the device.

- Close the stop valve on the carbon dioxide bottle if the work break lasts longer than 30 minutes.

Ending operation

- Release the trigger of the jet gun.
- Close the stop valve on the carbon dioxide bottle.

- Pull the trigger on the jet gun until no more pellets come out.

- Turn the program switch to level 1.

- Shut off the compressed air supply.

- Operate the trigger on the jet gun until the compressed air has escaped from the device.

- Turn the program switch to "0/OFF".

- Pull the mains plug out of the socket.

- Wind up the power cord, hang it on a hose/cable holder and secure with the rubber tensioner.

Illustration L

- ① Mains cable
- ② Hose/cable holder
- ③ Rubber tensioner
- ④ Exhaust hose

- Disconnect the compressed air hose from the device.

- Wind up the exhaust hose, hang it on a hose/cable holder and secure it with the rubber tensioner.
- Wind up the abrasive hose and hang it on the abrasive hose holder.
- Insert the jet gun with the cone into the holder on the device.

Transport

⚠ CAUTION

Risk of accidents and injuries

Take the weight of the device into account for transportation and storage. See chapter "Technical data".

ATTENTION

Risk of damage

Engine oil can escape when transporting horizontally. A subsequent lack of oil can lead to damage during the next operation. Transport the device only in a standing upright position.

- Carry out all the steps in the "Ending operation" chapter before transport.
- Release the parking brakes on the steering rollers and push the device by the push handle.
- Remove the carbon dioxide bottle from the device before loading it into a vehicle.
- The device can be lifted by 2 people. Each person uses a handle on the underside of the device and supports the device with the other hand on the upper edge.
- For transport in vehicles, lock the parking brakes on the steering rollers and secure the device with a tension belt.

Illustration M

Storage

⚠ CAUTION

Risk of accidents and injuries

Take the weight of the device into account for transportation and storage. See chapter "Technical data".

The device may only be stored indoors.

⚠ DANGER

Risk of asphyxiation

Carbon dioxide can accumulate in enclosed spaces and cause death by asphyxiation.

Only store carbon dioxide bottles (even if they are connected to the device) in well-ventilated locations.

Care and service

Maintenance instructions

Regular maintenance according to the following maintenance plan is fundamental for a safely operating system.

Use only original manufacturer spare parts or parts recommended by the original manufacturer, such as

- Spare parts and wearing parts,
- Accessories,
- Operating materials,
- Detergent.

⚠ DANGER

Danger of accident

The device can start unintentionally. Cold unit parts or liquid carbon dioxide can cause frostbite. Gaseous carbon dioxide can cause death by asphyxiation.

Before working on the device, carry out all the steps in the "Ending operation" chapter. Wait until the device has warmed up or wear cold protection clothing. Never put dry ice in your mouth.

ATTENTION

Risk of damage

Using the wrong detergent can damage the device and the jet gun.

Never clean the device or the jet gun with solvents, petrol or detergents containing oil.

Service contract

We recommend that you close a service contract to ensure reliable operation of the system. Please contact your KÄRCHER customer service department responsible.

Maintenance plan

Daily before the start of operations

- Carefully examine the abrasive hose for cracks, kink points and other damage. Soft spots in the hose indicate wear on the inside of the hose. Replace the defective or worn hose with a new hose.
- Examine electrical cables and plugs for damage. Have defective parts replaced by Customer Service.

Every 100 operating hours

- Check the couplings on the abrasive hose and on the device for damage and wear. Replace a defective hose, have defective couplings on the unit replaced by Customer Service.

Every 500 operating hours or annually

- Have the device checked by Customer Service.

Every 2 years

- Renew the abrasive hose at least every 2 years.

Tests

According to DGUV R 100-500, the following tests must be carried out on the unit by an expert. The results of the test must be recorded in a test certificate. The operator of the device must keep the test certificate until the next test.

After a business interruption of more than a year

- Check the device for correct condition and function.

After changing the installation site

- Check the device for proper condition, function and installation.

After repair work or changes that can affect operational safety

- Check the device for proper condition, function and installation.

Troubleshooting guide

⚠ DANGER

Danger of accident

The device can start unintentionally. Cold device parts or liquid carbon dioxide can cause frostbite. Gaseous carbon dioxide can cause death by asphyxiation.

Before working on the device, carry out all the steps in the "Ending operation" chapter. Wait until the device has warmed up or wear cold protection clothing. Never put dry ice in your mouth.

ATTENTION

Risk of damage

Using the wrong detergent can damage the device and the jet gun.

Never clean the device or the jet gun with solvents, petrol or detergents containing oil.

Fault display

Faults are indicated by the indicator lights on the control panel.

Illustration N

- ① Jet gun fault indicator
- ② Compressed air supply fault indicator
- ③ Fault indication pellet generation
- ④ Fault indication pellet dosing

Troubleshooting

Malfunctions often have simple causes that you can remedy yourself using the following overview. When in doubt, or in the case of malfunctions not mentioned here, please contact your authorised Kärcher Customer Service.

| Fault | Rectification |
|-----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The jet gun fault indicator lights up | <ul style="list-style-type: none"> Do not pull the trigger of the jet gun before switching it on. Remove the fastener on the trigger of the jet gun. |
| The jet gun fault indicator flashes | <ul style="list-style-type: none"> Check that the control cable of the jet gun is connected to the device. Check the control cable on the abrasive hose for damage. |
| The compressed air supply fault indicator lights up | <ul style="list-style-type: none"> Increase the air pressure. |
| The compressed air supply fault indicator flashes | <ul style="list-style-type: none"> Check the exhaust hose for clogging. The carbon dioxide bottle is too hot and therefore has too high a pressure. Set up the device including the carbon dioxide bottle in a cooler location or protect it from direct sunlight. |

| Fault | Rectification |
|------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The pellet production fault indicator lights up | <ul style="list-style-type: none"> Allow the device to thaw out. Check the carbon dioxide filter and change it if necessary. Then perform a reset. If the malfunction occurs repeatedly, replace the carbon dioxide bottle. |
| The pellet metering fault indicator lights up | <ul style="list-style-type: none"> Switch the device off and back on again. If the fault indicator remains lit, contact the customer service. |
| The pellet metering fault indicator flashes | <ul style="list-style-type: none"> Allow the metering motor to cool down. Position the device so that air can flow into the device from below. Contact Customer Service if necessary. |
| The voltage supply indicator light does not light up | <ul style="list-style-type: none"> Plug the mains plug into the socket. Check the on-site voltage supply. |
| The compressed air indicator light does not light up | <ul style="list-style-type: none"> Connect a compressed air hose to the device. Open the stop valve in the on-site compressed air supply. |
| The device does not work | <ul style="list-style-type: none"> Check the indicator lights and fault indicators. Perform a reset. |
| Poor cleaning performance | <ul style="list-style-type: none"> Turn the program switch to a higher level. Increase the jet pressure. Check the filling level of the carbon dioxide bottle. Do not use a heated carbon dioxide bottle. Protect the carbon dioxide bottle from heat radiation. The effectiveness of the pellet production drops sharply if the temperature of the carbon dioxide is above 31 °C. Allow the abrasive hose and the jet gun to thaw to clear any blockages. Then increase the jet pressure. |
| Pellet dosage too low | <ul style="list-style-type: none"> Turn the program switch to a higher level. Replace the carbon dioxide filter between the carbon dioxide bottle and the device. |
| Recurring interruptions in the dry ice stream | <ul style="list-style-type: none"> Turn the programme switch to a lower level or increase the jet pressure. If the jet nozzle is clogged: <ul style="list-style-type: none"> Immediately close the carbon dioxide bottle. Allow the unit to thaw for 30 minutes. Increase the jet pressure. Start the appliance with the carbon dioxide bottle closed to remove pellet residues. |

Performing a reset

1. Press the reset button inside the device with a screwdriver.

Illustration O

Replacing the carbon dioxide filter

ATTENTION

Malfunctions

Contaminated carbon dioxide can cause malfunctions.

When working on the carbon dioxide filter, be careful not to get any dirt into the device.

ATTENTION

Malfunctions

Malfunctions due to contamination.

After each loosening or unscrewing of the screw plug, the carbon dioxide filter and the copper seal must be replaced. If this is not done, particles can become detached from the carbon dioxide filter and lead to malfunctions.

Note

The carbon dioxide filter is backwashed and cleaned as soon as the pressurised cylinder connection is disconnected from the carbon dioxide cylinder. Regular replacement of the carbon dioxide filter is therefore not necessary.

- Close the stop valve on the carbon dioxide bottle.
- Operate the unit at the highest level for about 1 minute to depressurise the carbon dioxide hose.
- Unscrew the screw flange on the carbon dioxide bottle.
- Carefully unscrew the screw plug from the screw flange. Let the hose flange

hang down to prevent dirt from entering the carbon dioxide hose.

Illustration P

- Screw flange
- Carbon dioxide filter
- Copper sealing ring
- Screw plug
- Remove the carbon dioxide filter.
- Vacuum out the screw plug and the screw flange.
- Carefully press the new carbon dioxide filter onto the screw plug by hand.
- Replace the copper seal.
- Tighten the screw plug, holding the wide hexagon of the screw flange with an open-end wrench.
Tightening torque: 80 Nm.

Warranty

The warranty conditions issued by our relevant sales company apply in all countries. We shall remedy possible malfunctions on your appliance within the warranty period free of cost, provided that a material or manufacturing defect is the cause. In a warranty case, please contact your dealer (with the purchase receipt) or the next authorised customer service site.

(See overleaf for the address)

Accessories

ABS residual pressure valve

Order number 2.574-006.0

Necessary when using carbon dioxide bottles with a residual pressure valve.

Technical data

IB 10/
8 L2P

Electrical connection

| | | |
|---------------|---|---------------|
| Mains voltage | V | 220... 230 |
|---------------|---|---------------|

| | | |
|-------|---|---|
| Phase | ~ | 1 |
|-------|---|---|

| | | |
|-----------|----|-------------|
| Frequency | Hz | 50...6 0 |
|-----------|----|-------------|

| | | |
|--------------|----|-----|
| Power rating | kW | 1,0 |
|--------------|----|-----|

| | | |
|----------------------|------|--|
| Degree of protection | IPX4 | |
|----------------------|------|--|

| | | |
|--------------------------|----|------|
| Leakage current, typical | mA | <3,5 |
|--------------------------|----|------|

| | | |
|-------------------------|--------------------|--|
| Residual current device | delta I, 0,03 A | |
|-------------------------|--------------------|--|

Compressed air connection

| | | |
|-------------------------------------------|--------|-----|
| Compressed air hose, nominal width (min.) | Inches | 0,5 |
|-------------------------------------------|--------|-----|

| | | |
|-----------------|--------------|-------------|
| Pressure (max.) | MPa (bar) | 1,0 (10) |
|-----------------|--------------|-------------|

| | | |
|----------------------------------|--------|-----|
| Compressed air consumption, max. | m³/min | 0,8 |
|----------------------------------|--------|-----|

Device performance data

| | | |
|--------------------|--------------|-------------|
| Jet pressure, max. | MPa (bar) | 1,0 (10) |
|--------------------|--------------|-------------|

| | | |
|----------------------------|--------------|---------------|
| Jet pressure, min. level 1 | MPa (bar) | 0,07 (0,7) |
|----------------------------|--------------|---------------|

| | | |
|----------------------------|--------------|---------------|
| Jet pressure, min. level 2 | MPa (bar) | 0,14 (1,4) |
|----------------------------|--------------|---------------|

| | | |
|----------------------------|--------------|---------------|
| Jet pressure, min. level 3 | MPa (bar) | 0,28 (2,8) |
|----------------------------|--------------|---------------|

| | | |
|----------------------------|------|-------------|
| Carbon dioxide consumption | kg/h | 20...6 0 |
|----------------------------|------|-------------|

**IB 10/
8 L2P**

Recoil force of the jet gun, N max. 40

Carbon dioxide bottle

Maximum filling quantity kg 37,5

Diameter, max. mm 220

Ambient conditions

Air exchange m³/h 2000

Dimensions and weights

Typical operating weight kg 95

(without carbon dioxide bottle)

Length mm 866

Width mm 443

Height without a carbon dioxide bottle mm 970

Determined values in acc. with EN 60335-2-79

Hand-arm vibration value m/s² 0,08

Sound pressure level dB(A) 95

Sound power level LWA + K uncertaintyWA dB(A) 115

Subject to technical modifications.

Declaration of Conformity**EU Declaration of Conformity**

We hereby declare that the machine described below complies with the relevant basic safety and health requirements in the EU Directives, both in its basic design and construction as well as in the version placed in circulation by us. This declaration is invalidated by any changes made to the machine that are not approved by us.

Product: Ice Blaster

Type:

1.574-xxx (IB 10/8 L2P)

Currently applicable EU Directives

2006/42/EC (+2009/127/EC)

2014/30/EU

2011/65/EU

2009/125/EC + 2009/1781

Harmonised standards used

EN 60335-1

EN IEC 63000: 2018

EN 62233: 2008

EN 55014-1: 2017 + A11: 2020

EN 55014-2: 2015

EN 61000-3-2: 2014

EN 61000-3-3: 2013

The signatories act on behalf of and with the authority of the company management.

Declaration of Conformity (UK)

We hereby declare that the product described below complies with the relevant provisions of the following UK Regulations, both in its basic design and construction as well as in the version put into circulation by us. This declaration shall cease to be valid if the product is modified without our prior approval.

Product: Ice Blaster

Type:

1.574-xxx (IB 10/8 L2P)

Currently applicable UK Regulations

S.I. 2008/1597 (as amended)

S.I. 2016/1091 (as amended)

S.I. 2012/3032 (as amended)

2009/125/EC + 2009/1781

Designated standards used

EN 60335-1

EN IEC 63000: 2018

EN 62233: 2008

EN 55014-1: 2017 + A11: 2020

EN 55014-2: 2015

EN 61000-3-2: 2014

EN 61000-3-3: 2013

The signatories act on behalf of and with the authority of the company management.

H. Jenner
Chairman of the Board of Management

S. Reiser
Director Regulatory Affairs & Certification

Documentation supervisor:

S. Reiser

Alfred Kärcher SE & Co. KG

Alfred-Kärcher-Str. 28 - 40

71364 Winnenden (Germany)

Ph.: +49 7195 14-0

Fax: +49 7195 14-2212

Winnenden, 2021/02/01

H. Jenner
Chairman of the Board of Management

S. Reiser
Director Regulatory Affairs & Certification

Documentation supervisor:

S. Reiser

Alfred Kärcher SE & Co. KG

Alfred-Kärcher-Str. 28 - 40

71364 Winnenden (Germany)

Ph.: +49 7195 14-0

Fax: +49 7195 14-2212

Winnenden, 2021/02/01



THANK YOU!

MERCI! DANKE! ¡GRACIAS!



Registrieren Sie Ihr Produkt und profitieren Sie von vielen Vorteilen.

Register your product and benefit from many advantages.

Enregistrez votre produit et bénéficier de nombreux avantages.

Registre su producto y aproveche de muchas ventajas.

www.kaercher.com/welcome



Bewerten Sie Ihr Produkt und sagen Sie uns Ihre Meinung.

Rate your product and tell us your opinion.

Évaluer votre produit et dites-nous votre opinion.

Reseña su producto y díganos su opinión.



www.kaercher.com/dealersearch

Alfred Kärcher SE & Co. KG

Alfred-Kärcher-Str. 28-40
71364 Winnenden (Germany)
Tel.: +49 7195 14-0
Fax: +49 7195 14-2212

